



User Quick Reference Instructions

Arming: Press 4 digit t code then: 'away' - for full protection

'Stay' - for interior off

'Instant' - no delay

Disarming: Press 4 digit code. If wrong code is entered, hit '#' and re-enter code.

User Programming:

1. Press 4 digit master user code (normally programmed as user #1-cs code), 'arrow' and '8'
- Touch pad will display 'PRG'
2. Press '1' - touch pad will display ':'
3. Press '02' - for user #2
4. Press 'arrow' then '2' then 'arrow' again
5. Press a new 4-digit code
6. Press 'arrow'
7. Press '#', '#', '#' - to exit programming

Reset Time: Press master user code, 'arrow', '8', and '3' and enter time (in military) then 'arrow', '#', '#'

Reset Fire Alarm: Press user code, 'arrow', '2'

Zone Status: Press user code, 'arrow', '6'. Hit '6' to review each zone.

C=closed/number displayed, O=Open, By=Bypassed

Shunting: Check Zone Status (as above) then at desired zone press 'Bypass'

Monitor (Chime): Press user code, 'arrow', '4'. Unit will display 'MON'. To Turn off enter code and '#' or Arm System

Alarm Memory: Press user code, 'arrow', '4'. Unit will alternately display the zone that caused the alarm and the time of the alarm, press '#' to exit.

Silence Trouble: Press user code then #

Trouble Conditions: Press user code, 'arrow', '5'.

Trouble will display (see below for listing). Press '5' again to display multiple

Trouble conditions. Touch pad will show trouble until corrected.

The system will still Arm and Disarm normally.

Emergency Shut Down: Unplug battery connector in lower left of circuit board and unplug transformer from wall outlet or disconnect terminal 1.

List of Trouble Conditions:

TLM = telephone line outage

BELL = fire bell trouble

BATT = low battery

AUX = blown fuse

FIRE = smoke loop trouble

COMM = communication failure

AC = ac power outage

BUS = disconnected wire to keypad or expansion board