



User Quick Reference Instructions

Napco 1008e and 1008 Quick Reference

Arming; Should have a steady green status light on, enter 4 digit user code
red armed light should come on.

Disarming: enter 4 digit user code, red armed light should go out, if it does not wait 3 seconds and try code again.

User programming: user can program up to 8 user codes. Hold down button number 8 for 3 seconds, then enter the master user code (factory default code is 1-2-3-4-5-6) press the letter B button and then the user number 1-8, next enter the new 4 digit code. To exit program mode press the letter B button 2 times.

Zone display: Press and hold button number 3 to display open zone or zones.

Zone Bypass: Press the letter B button and the zone number to be bypassed, if the panel has been programmed for group bypass (where more than one zone can be bypassed at the same time; example 2 motion zones) pressing the letter B button 2 times will bypass the group. To display bypassed zones press the number 2 button and hold, the bypassed zone or zones will be shown on the display.

Chime Feature: Press and hold button number 5 for 3 seconds

Interior On/Off: See Zone bypass for group bypassing

Alarm History: Press and hold the letter B button, Alarm memory will be display by zone number.

Delay On/Off: Press and hold button number 4 for 3 seconds.

System Reset: Press and hold button number 9 for 3 seconds.