



## User Quick Reference Instructions

### ARM

- Check to make sure the system is READY - Green ready light is lit
- Enter 4-digit user code
- The On/Off light will light
- Exit through a door designated as an exit/entry door.

### DISARM

Enter through a door designated as an exit/entry door.

- Enter 4-digit user code
- The System On (Arm) light will go out

### USER PROGRAMMING

System can have up to 6 different user codes. User #1 is the only users allowed to add or delete users codes, they are known as Master User Codes.

- Press CODE button
- Enter 4-digit Master User Code
- Enter user # (must be one digit 1, 2.....15)
- Enter new 4-digit user code.

The keypad will beep after each digit is pressed

Please note: User #6 is always a duress code.

### DELETE USER CODE

- Press CODE button
- Enter 4-digit Master User Code
- Enter user # (must be two digit 1, 2.....15)
- Press the pound button

### ZONE STATUS

- The red zone lights 1-6 are located in the left side of the keypad
  - Red zone light for zone will be on when system is not ready
  - Inside the keypad door there is a list of zones descriptions
  - Which ever zone is lit in red is the zone that requires investigation
- Example: Zone 3 red light is on - Zone 3 description: rear door, may be corrected by closing the door

### BYPASS

Bypass excludes a zone of protection from the security system and can only be done when the system is turned off.

- Press the BYPASS button
- Enter 4-digit user code
- Enter the 1-digit number of the zone to be by passed

### UNBYPASS

Unbypass returns a bypassed zone to normal operation.

- Press the BYPASS button
- Enter 4-digit user code