



User Quick Reference Instructions

Quick Reference for FBI XL-4 XL 4CPO XL-4CPO

64 user Codes (001 thru 064)

8 hard wired zone, but is capable of 64 zones (008 thru 064)

Capable of 8 partitions.

Arming: enter digit user code. To reset press 3 & 1 together.

Disarming: enter four digit user code

User Programming: press the CODE key, enter the four digit master user code, then the three digit user number, enter new four digit user code, then enter the authorization level 1 thru 7.

Normal user codes will be level 4: arm, disarm & bypass.

Example: CODE, 7356, 003, 2345, & 4. User number 3 is now 2345.

To program new Master User Code authorization level 1, would be used.

Zone Display For LCD: press # & 4. This will display the descriptors for the zones associated with your partition only. To exit from zone directory press any key.

Shunting: Press BYPASS key, then four digit user code, then three digit zone number. Example: BYPASS 7356 016. Zone 16 has just been bypassed with user code 7356. Repeat steps to Unbypass a zone.

Interior On/Off: press the STAY key followed by four digit user code. Automatically resets after the system is disarmed.

Delay On/Off: The system must be ready. Press the INSTANT key followed by the four digit user code.

Monitor (Chime): press # & 6, then 0 to turn feature on or off.

Alarm Memory:

Fire Reset: enter four digit user code, or press the 3 & 1.

Trouble Conditions: Alarm - fast blinking, Trouble - slow pulse, Bypass - Slow Low intensity blinking, and Not Ready - solid on

Emergency Shut Down: Open control panel, disconnect one side of the battery and unplug transformer.

Notes: panic buttons are initiated by using the following keys:

- 1) keypad panic: * & #
- 2) keypad medical: 1 & *
- 3) keypad fire: 3 & #